



LEOPARD IMAGING INC

LI-JETSON-CB-IMX477CS-X

Data Sheet

Key Features

- Compatible with Nvidia® Jetson™ TX1/TX2 (TX1/TX2 SOM not included)
- MIPI CSI-2 interface
- Support up to six cameras
- Two carrier board options
 - LI-TX1-CB
 - Includes three 4-lane interface
 - LI-TX1-CB-6CAM
 - Includes six 2-lane interface
- Sony Diagonal 7.857 mm (Type 1/2.3) CMOS Image Sensor IMX477
- Active pixels: 4056H x 3040V
- Pixel size: 1.55 um x 1.55 um
- Color camera
- I-PEX cable part#: FAW-1233-03
- Length of the I-PEX cable: 300mm
- Support multiple length cables
- Connector Part#: 20525-030E-02C
- Support CS lens
- Provide customization services
- Part#:
 - (1 cam) **LI-JETSON-CB-IMX477CS**
 - (2 cam) **LI-JETSON-CB-IMX477CS-D**
 - (3 cam) **LI-JETSON-CB-IMX477CS-T**
 - (6 cam) **LI-JETSON-CB-IMX477CS-H**



Lens Spec

- Model: ES0522F.IR
- Focal length: 5.0 mm
- Aperture, F/#: 2.2
- FOV (D/H/V): 96.5 °/ 80 °/61.5 °
- TV Distortion: < -8%
- Mount Type: CS

BOM

Nvidia TX1/TX2 SOM not included

#	Items	QTY
1	LI-TX1-CB or LI-TX1-CB-6CAM	1
2	LI-IMX477-MIPI-CS	1,2,3 or 6
3	FAW-1233-03 cable	1,2,3 or 6
4	DC 12V power supply	1
5	USB 2.0 Type A - Micro B cable	1




Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
Phone: +1-408-263-0988
Fax: +1-408-217-1960
Email: sales@leopardimaging.com
Website: www.leopardimaging.com

LI-JETSON-CB-IMX477CS

BOM

#	Items	QTY
1	LI-TX1-CB	1
2	LI-IMX477-MIPI-CS	1
3	FAW-1233-03 cable	1
4	DC 12V power supply	1
5	USB 2.0 Micro B cable	1

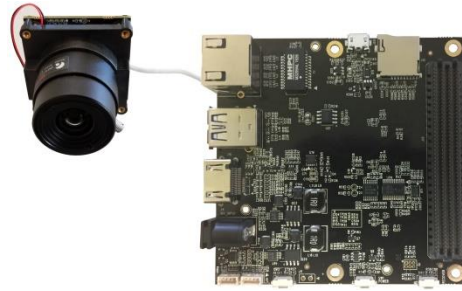

LI-JETSON-CB-IMX477CS-D

BOM


#	Items	QTY
1	LI-TX1-CB	1
2	LI-IMX477-MIPI-CS	2
3	FAW-1233-03 cable	2
4	DC 12V power supply	1
5	USB 2.0 Micro B cable	1



LI-JETSON-CB-IMX477CS-T

BOM

#	Items	QTY
1	LI-TX1-CB	1
2	LI-IMX477-MIPI-CS	3
3	FAW-1233-03 cable	3
4	DC 12V power supply	1
5	USB 2.0 Micro B cable	1

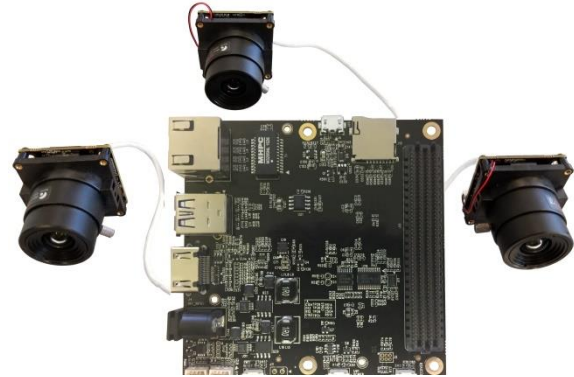

LI-JETSON-CB-IMX477CS-H

BOM

#	Items	QTY
1	LI-TX1-CB-6CAM	1
2	LI-IMX477-MIPI-CS	6
3	FAW-1233-03 cable	6
4	DC 12V power supply	1
5	USB 2.0 Micro B cable	1



Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA

Phone: +1-408-263-0988


Fax: +1-408-217-1960

Email: sales@leopardimaging.com


Website: www.leopardimaging.com

Dimensions

LI-IMX477-MIPI-CS

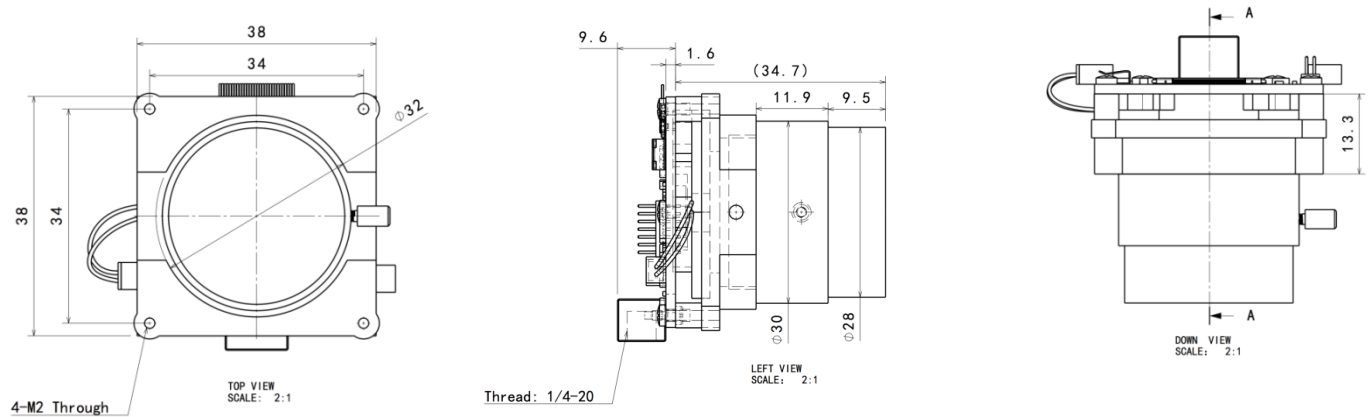


LI-TX1-CB

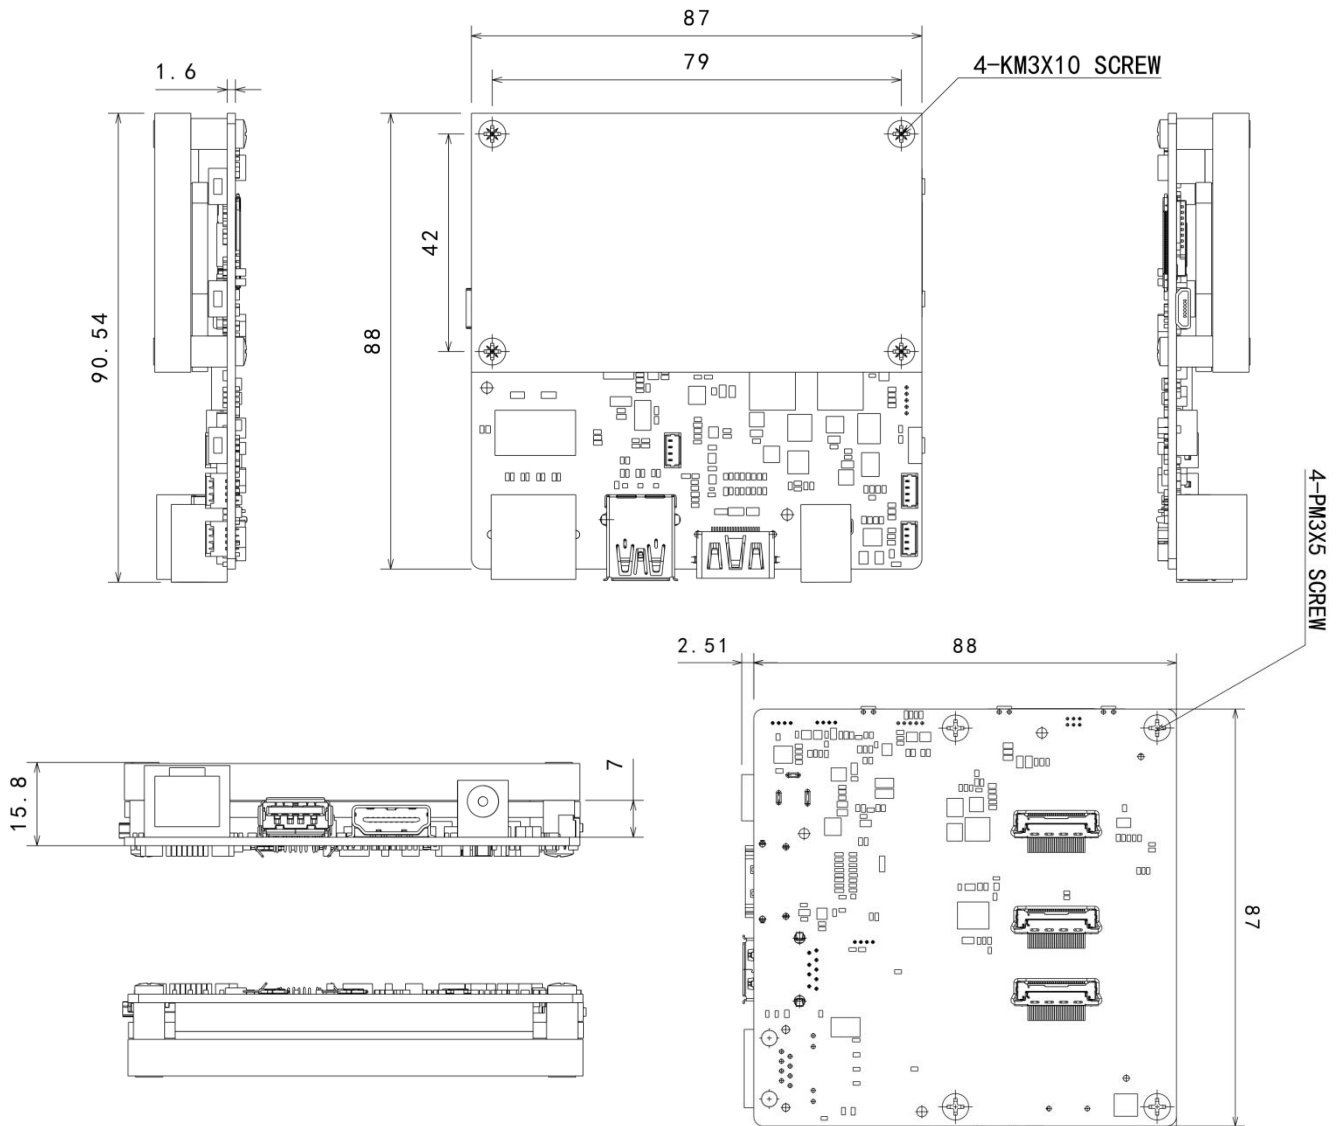


Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
Phone: +1-408-263-0988
Fax: +1-408-217-1960
Email: sales@leopardimaging.com
Website: www.leopardimaging.com

LI-TX1-CB-6CAM


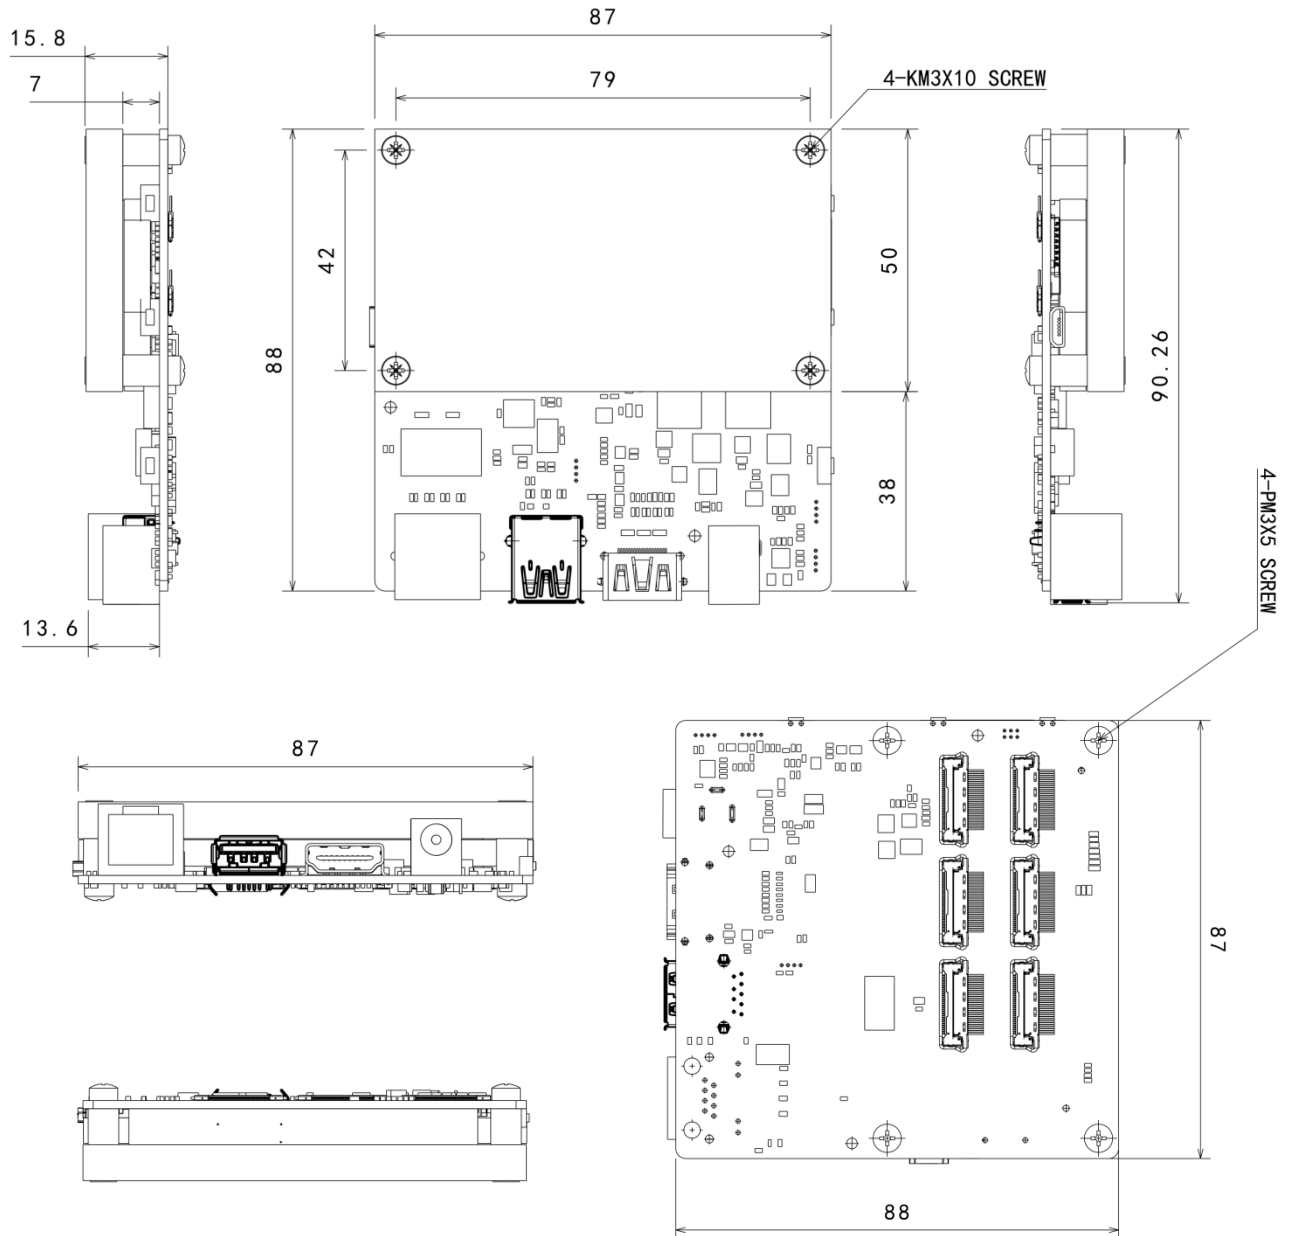


FAW-1233-03

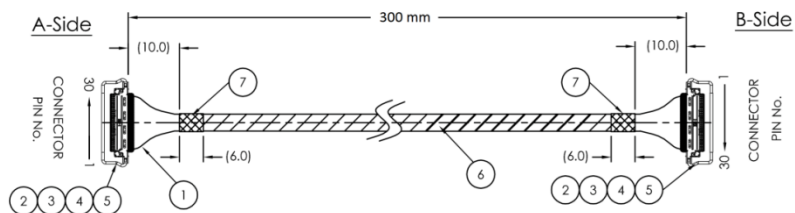

Leopard Imaging Inc.


48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com

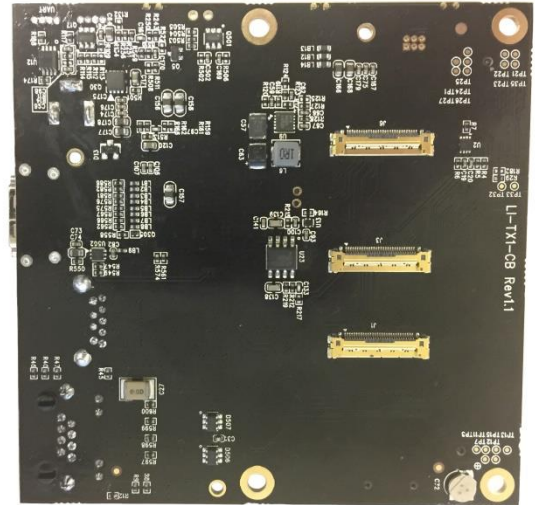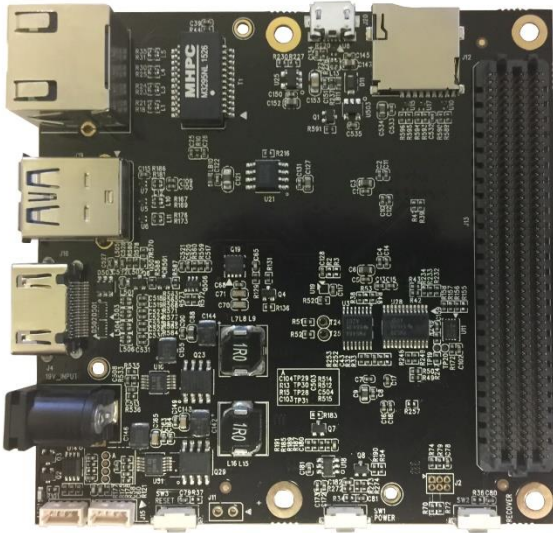

Camera Interfaces

Interface J1

- Part#: 20525-030E-02C
- Number of Positions: 30
- Pitch: 0.4mm
- Mating I-PEX cable: FAW-1233-03 (300mm)

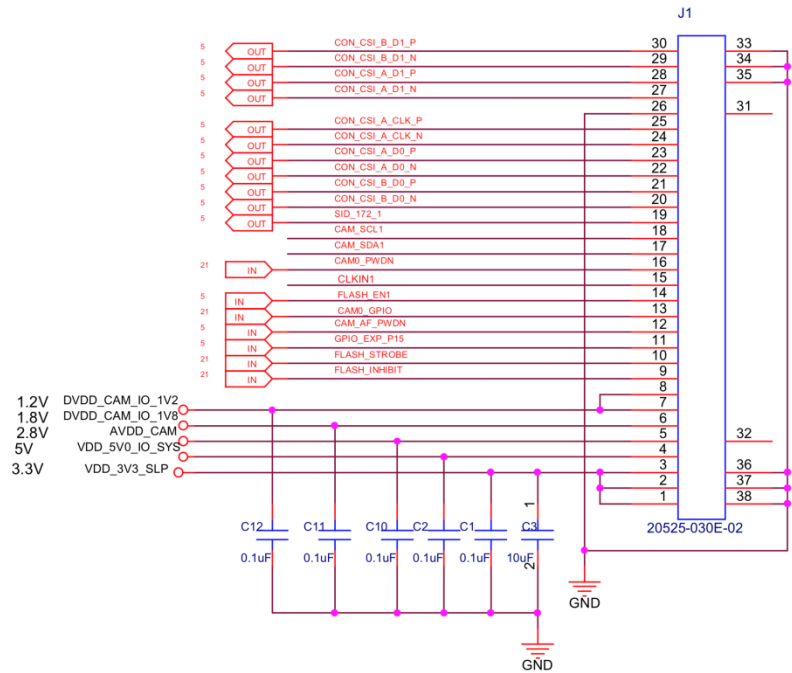


Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com


Interface J3

- Part#: 20525-030E-02C
- Number of Positions: 30
- Pitch: 0.4mm
- Mating I-PEX cable: FAW-1233-03 (300mm)

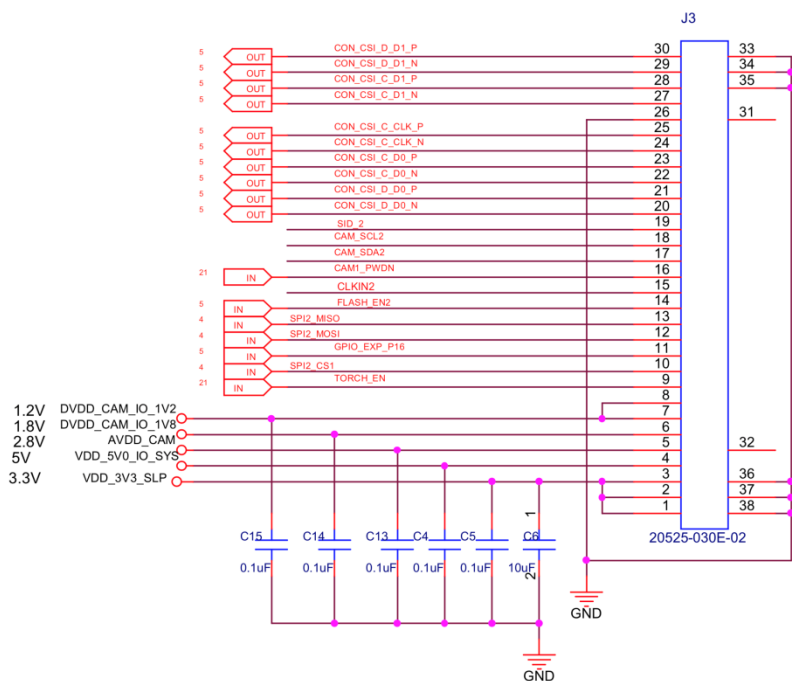

Interface J6



- Part#: 20525-030E-02C
- Number of Positions: 30
- Pitch: 0.4mm
- Mating I-PEX cable: FAW-1233-03 (300mm)

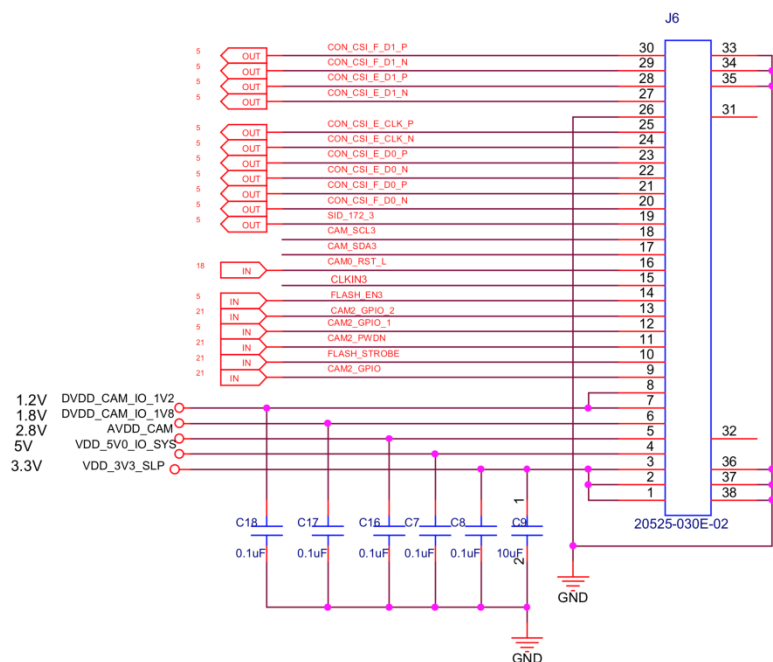

Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com


LI-TX1-CB-6CAM

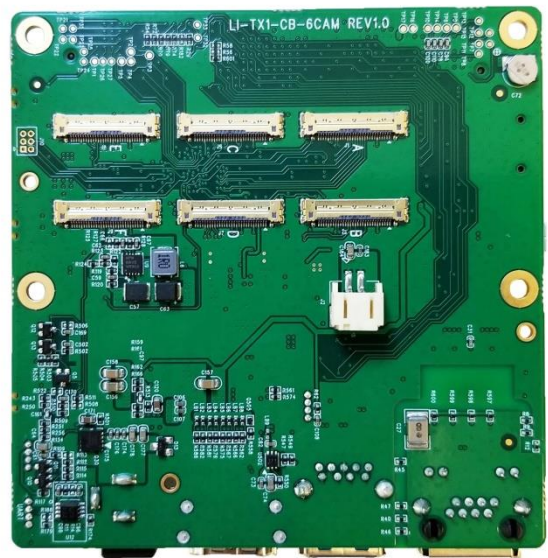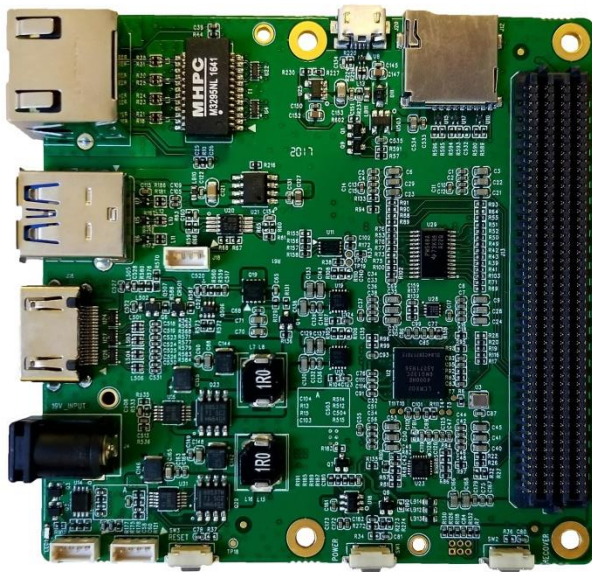

Camera Interfaces

Interface J1 (camera channel A)

- Part#: 20525-030E-02C
- Number of Positions: 30
- Pitch: 0.4mm
- Mating I-PEX cable:
FAW-1233-03 (300mm)

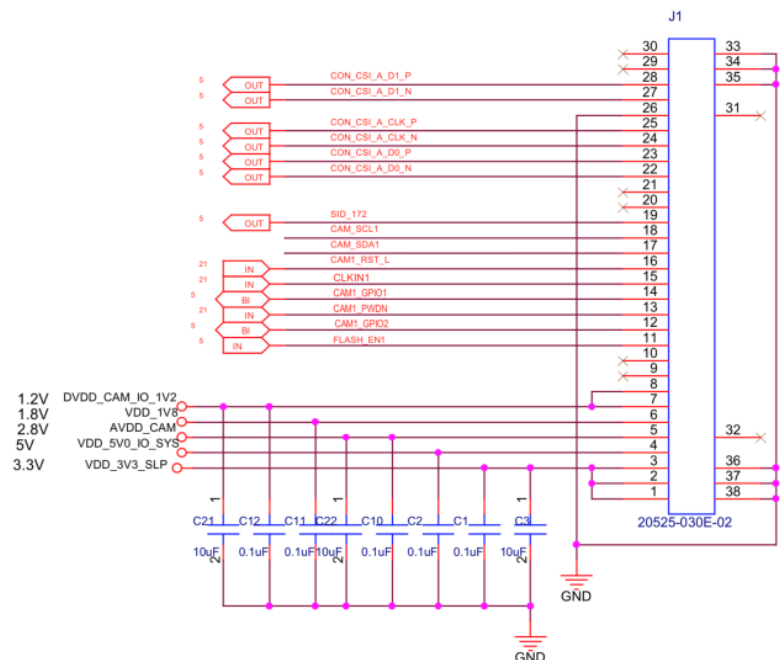


Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com


Interface J3 (camera channel B)

- Part#: 20525-030E-02C
- Number of Positions: 30
- Pitch: 0.4mm
- Mating I-PEX cable:
FAW-1233-03 (300mm)

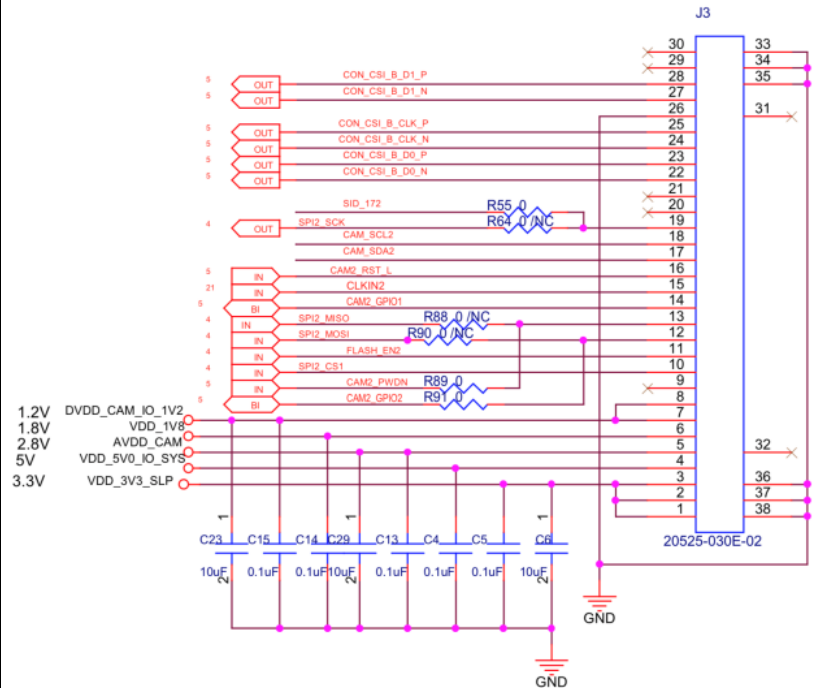

Interface J6 (camera channel C)

- Part#: 20525-030E-02C
- Number of Positions: 30
- Pitch: 0.4mm
- Mating I-PEX cable:
FAW-1233-03 (300mm)

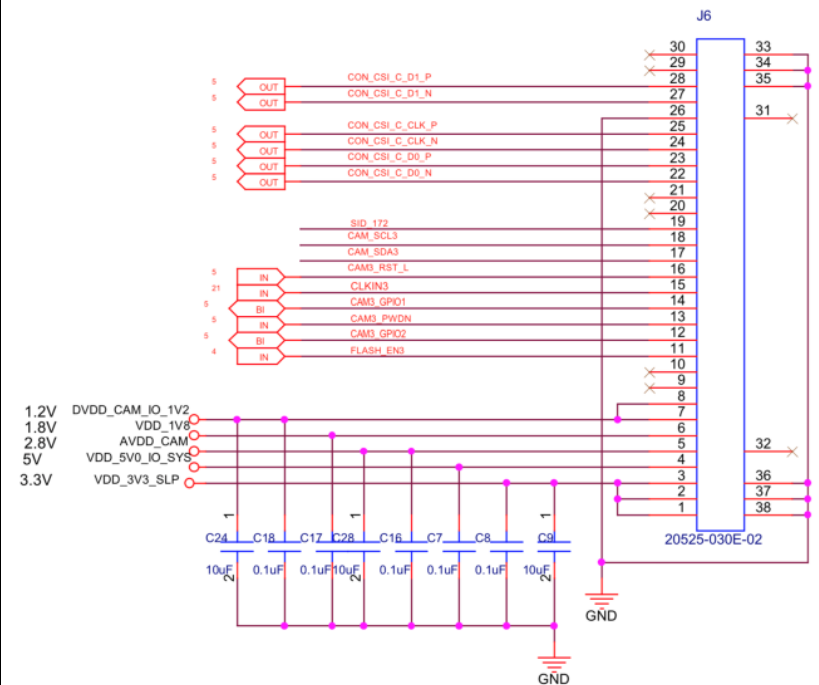


Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com


Interface J7 (camera channel D)

- Part#: 20525-030E-02C
- Number of Positions: 30
- Pitch: 0.4mm
- Mating I-PEX cable:
FAW-1233-03 (300mm)

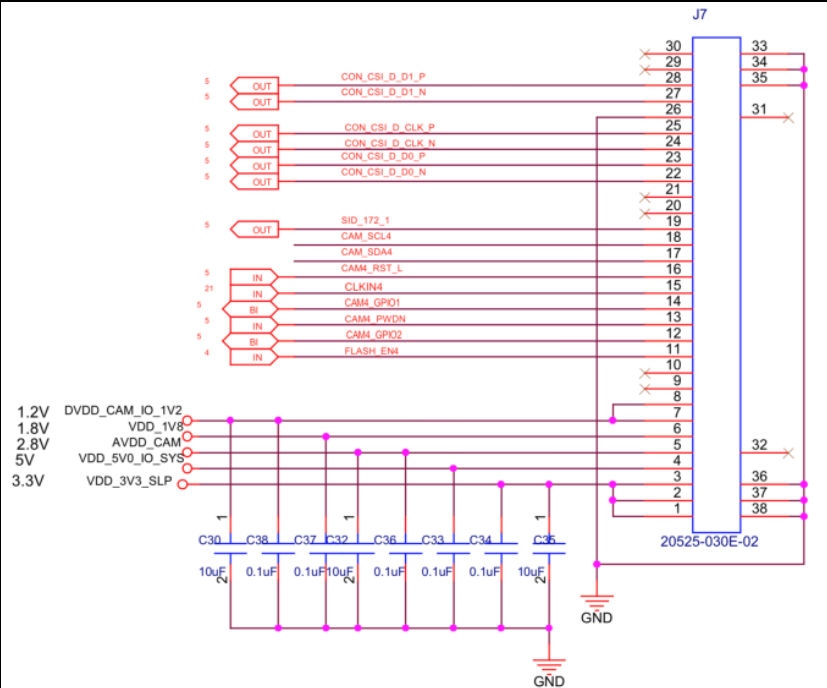

Interface J8 (camera channel E)

- Part#: 20525-030E-02C
- Number of Positions: 30
- Pitch: 0.4mm
- Mating I-PEX cable:
FAW-1233-03 (300mm)

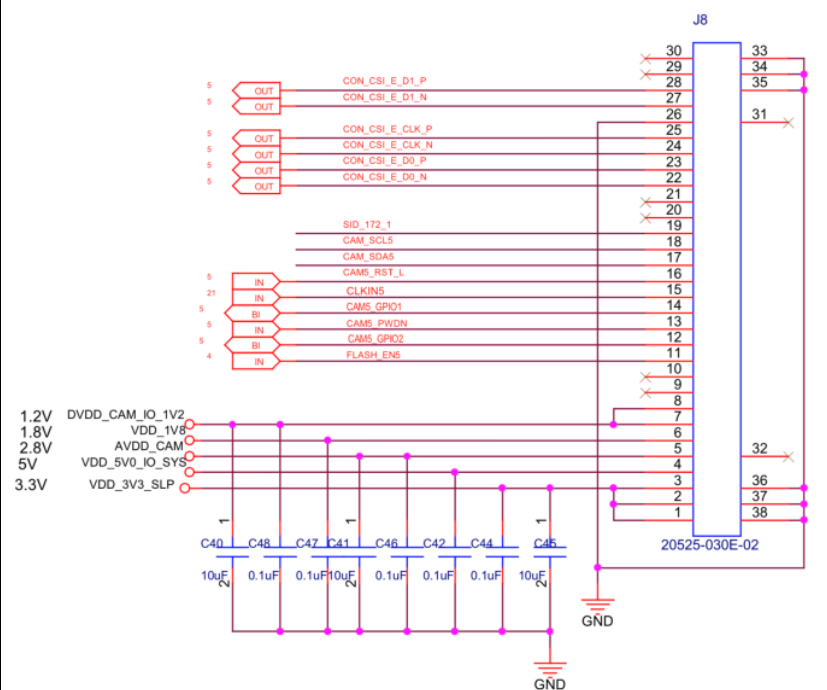


Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com

Interface J9 (camera channel F)


- Part#: 20525-030E-02C
 - Number of Positions: 30
 - Pitch: 0.4mm
- Mating I-PEX cable:
FAW-1233-03 (300mm)

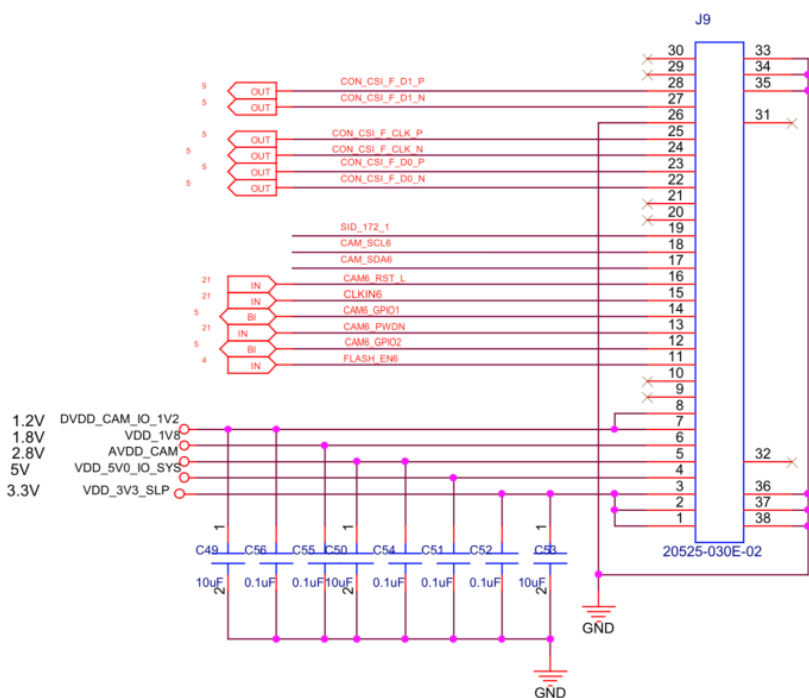

Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com

LI-IMX477-MIPI-CS

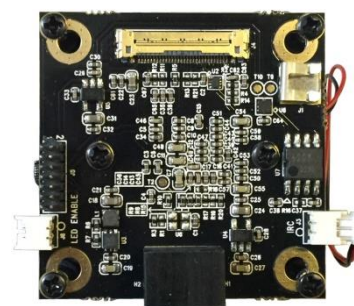

Camera Spec	
Image Sensor	Sony Diagonal 7.857 mm (Type 1/2.3) CMOS Image Sensor IMX477
Optical format	1/2.3"
Number of active pixels	4056 (H) x 3040 (V)
Pixel size	1.55um (H) x 1.55um (V)
Color or Mono	Color
Interface	MIPI interface
Lens mount	CS
Weight	58 g
Interfaces	
Interface J1: - Part#: 20525-030E-02C - Number of Positions: 30 - Pitch: 0.4mm - Mating I-PEX cable: FAW-1233-03 (300mm)	
Interface J3: - Part#: 1734829-2 - Number of Positions: 2 - Pitch: 1.25mm	
Interface J1: - Part#: 1734829-2 - Number of Positions: 2 - Pitch: 1.25mm	



Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com

Absolute Maximum Ratings

Item	Symbol	Ratings	Unit	notes
Supply voltage (analog)	V _{ANA}	-0.3 to +3.3	V	refer to V _{SS} level
Supply voltage (digital)	V _{DIG}	-0.3 to +1.8	V	
Supply voltage (interface)	V _{IF}	-0.3 to +3.3	V	
Input voltage (digital)	V _I	-0.3 to +3.3	V	
Output voltage (digital)	V _O	-0.3 to +3.3	V	
Guaranteed operating temperature	T _{OPR}	-20 to +75	°C	
Guaranteed storage temperature	T _{STG}	-30 to +80	°C	
Guaranteed performance temperature	T _{SPEC}	-20 to +60	°C	

Recommended Operating Conditions


Item	Symbol	Ratings	Unit	notes
Supply voltage (analog)	V _{ANA} ^{*1}	2.8 ± 0.1	V	refer to V _{SS} level
Supply voltage (digital)	V _{DIG} ^{*2}	1.05 ± 0.1	V	
Supply voltage (interface)	V _{IF} ^{*3}	1.8 ± 0.1	V	

^{*1} V_{ANA}: V_{DDSUB}, V_{DDHAN}, V_{DDHCM1} to 2, V_{DDHSN1} to 4 (2.8 V power supply)

^{*2} V_{DIG}: V_{DDLSC1} to 4, V_{DDLCN1} to 2, V_{DDLPL1} to 2, V_{DDLIF} (1.05 V power supply)

^{*3} V_{IF}: V_{DDMIO1} to 2, V_{DDMIF} (1.8 V power supply)

Spectral Sensitivity Characteristics

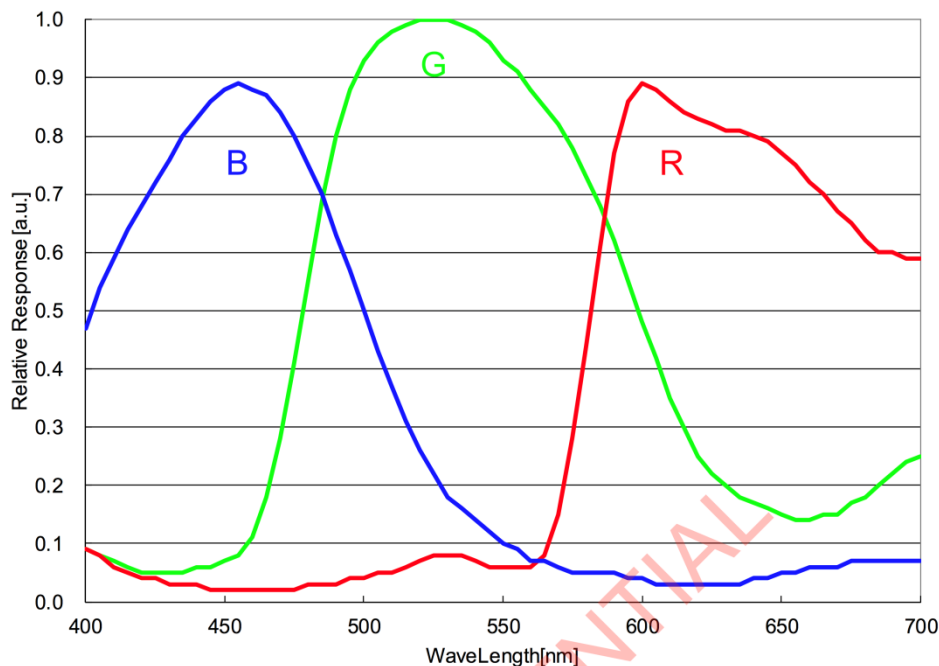

Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA

Phone: +1-408-263-0988

Fax: +1-408-217-1960

Email: sales@leopardimaging.com

Website: www.leopardimaging.com

DC Characteristics

Item	Pins	Symbol	Conditions	Min.	Typ.	Max.	Unit
Supply voltage	V _{DD} SUB, V _{DD} HCM1 to 2, V _{DD} HSN1 to 4, V _{DD} HAN	V _{ANA}		2.7	2.8	2.9	V
	V _{DD} LCN1 to 2, V _{DD} LSC1 to 4, V _{DD} LIF, V _{DD} LPL1 to 2	V _{DIG}		0.95	1.05	1.15	V
	V _{DD} MIO1 to 2, V _{DD} MIF	V _{IF}		1.7	1.8	1.9	V
Digital input voltage	SDA,	V _{IH}		0.7 V _{IF}		2.9	V
	SCL	V _{IL}		- 0.3		0.3 V _{IF}	V
Digital input voltage	XCLR, INCK, GYINT,	V _{IH}		0.65 V _{IF}		V _{IF} + 0.3	V
	SDI,SLASEL	V _{IL}		- 0.3		0.35 V _{IF}	V
Digital output voltage	SDA	V _{OH}		V _{IF} - 0.4			V
		V _{OL}				0.4	V
Digital output voltage	GPO,SDO, SCSB, FSTROBE	V _{OH}		V _{IF} - 0.4			V
		V _{OL}				0.4	V




Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com

AC Characteristics

Master Clock Square Waveform Input Diagram

Input specifications are shown below when square-wave signal is input directly into the external pin INCK.

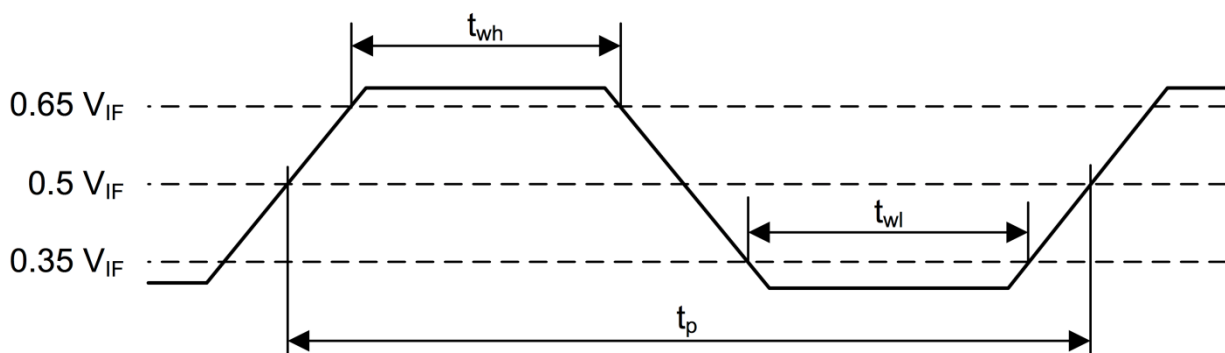

Master Clock Square Waveform Input Characteristics


PARAMETER	Symbol	Min.	Typ.	Max.	Unit
INCK clock frequency	f _{SCK}	6		27	MHz
INCK clock period	t _p	37.0		166.7	ns
INCK low level width	t _{wl}	0.4 t _p		0.6 t _p	ns
INCK high level width	t _{wh}	0.4 t _p		0.6 t _p	ns
INCK jitter	T _{jitter}			600	ps



Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
Phone: +1-408-263-0988
Fax: +1-408-217-1960
Email: sales@leopardimaging.com
Website: www.leopardimaging.com

2-wire serial communication block characteristics

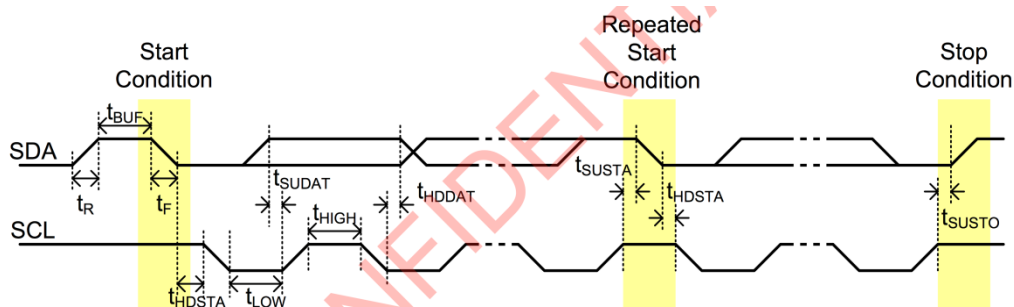

2-wire serial communication block specification

Parameter	Symbol	Conditions	Min. (Fast-mode Plus)	Max. (Fast-mode Plus)	Unit
Low level input voltage	V_{IL}		-0.5	0.3 V_{IF}	V
High level input voltage	V_{IH}		0.7 V_{IF}	2.9	V
Low level output voltage	V_{OL1}	$V_{IF} > 2$ V, Sink 3 mA	0	0.4	V
	V_{OL2}	$V_{IF} < 2$ V, Sink 3 mA	0	0.2 V_{IF}	V
Output fall time	t_{of}	Load 10 pF – 400 pF, 0.7 $V_{IF} \rightarrow$ 0.3 V_{IF}		250 (120)	ns
Input current	I_I	0.1 $V_{IF} \rightarrow$ 0.9 V_{IF}	-10	10	μ A
SDA I/O capacitance	$C_{I/O}$			10	pF
SCL Input capacitance	C_I			10	pF

2-wire serial communication block AC specification

Parameter	Symbol	Min. (Fast-mode Plus)	Max. (Fast-mode Plus)	Unit
SCL clock frequency	f_{SCL}	0	400 (1000)	kHz
Rise time (SDA and SCL)	t_R	—	300 (120)	ns
Fall time (SDA and SCL)	t_F	—	300 (120)	ns
Hold time (start condition)	t_{HDSTA}	0.6 (0.26)	—	μ s
Setup time (rep.-start condition)	t_{SUSTA}	0.6 (0.26)	—	μ s
Setup time (stop condition)	t_{SUSTO}	0.6 (0.26)	—	μ s
Data setup time	t_{SUDAT}	100 (50)	—	ns
Data hold time	t_{HDDAT}	0	—	μ s
Bus free time between Stop and Start condition	t_{BUF}	1.3 (0.5)	—	μ s
Low period of the SCL clock	t_{LOW}	1.3 (0.5)	—	μ s
High period of the SCL clock	t_{HIGH}	0.6 (0.26)	—	μ s


Note) Fast-mode Plus supports only available with INCK $\geq$ 8.0 MHz



Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com

Power-on Sequence

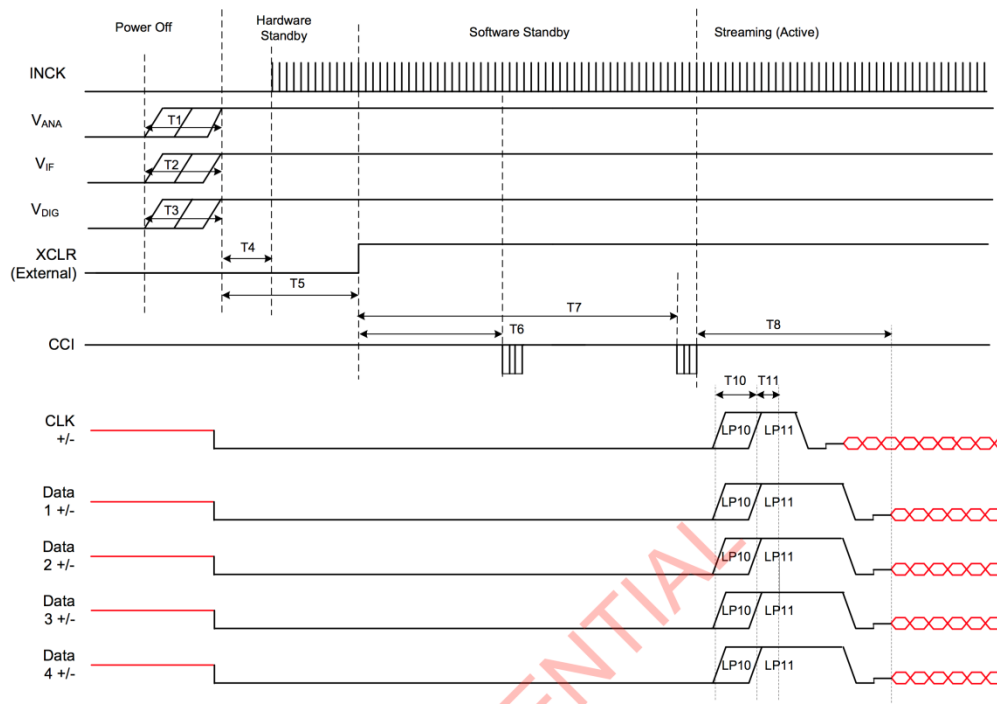

Item	Label	Min.	Max.	Unit	Comment
V_{ANA} rising – V_{ANA} ON	T1	V_{ANA} and V_{IF} and V_{DIG} may rise in any order.		μs	Slew rate of V_{ANA} , V_{IF} and V_{DIG} (0 % - 100 %): Max. 50 mV/ μs
V_{IF} rising – V_{IF} ON	T2			μs	
V_{DIG} rising – V_{DIG} ON	T3			μs	
V_{ANA} and V_{IF} and V_{DIG} rising - INCK start	T4	0		μs	Presence of INCK during Power off is acceptable
V_{ANA} and V_{IF} and V_{DIG} rising - XCLR rising	T5	0		ms	After T1, T2 and T3
INCK start and XCLR rising till CCI Read version ID register wait time	T6	0.6		ms	
INCK start and XCLR rising till Send Streaming Command wait time (To complete reading all parameters from NVM)	T7	8		ms	
Start of first streaming from Sending Streaming Command.	T8		4.0 ms + The delay of the coarse integration time value		
D-PHY power up	T10	1	1.1	ms	
D-PHY init.	T11	100	110	μs	


Note) XCLR needs to be Low until all power supplies complete power-on



Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com

Power-off Sequence

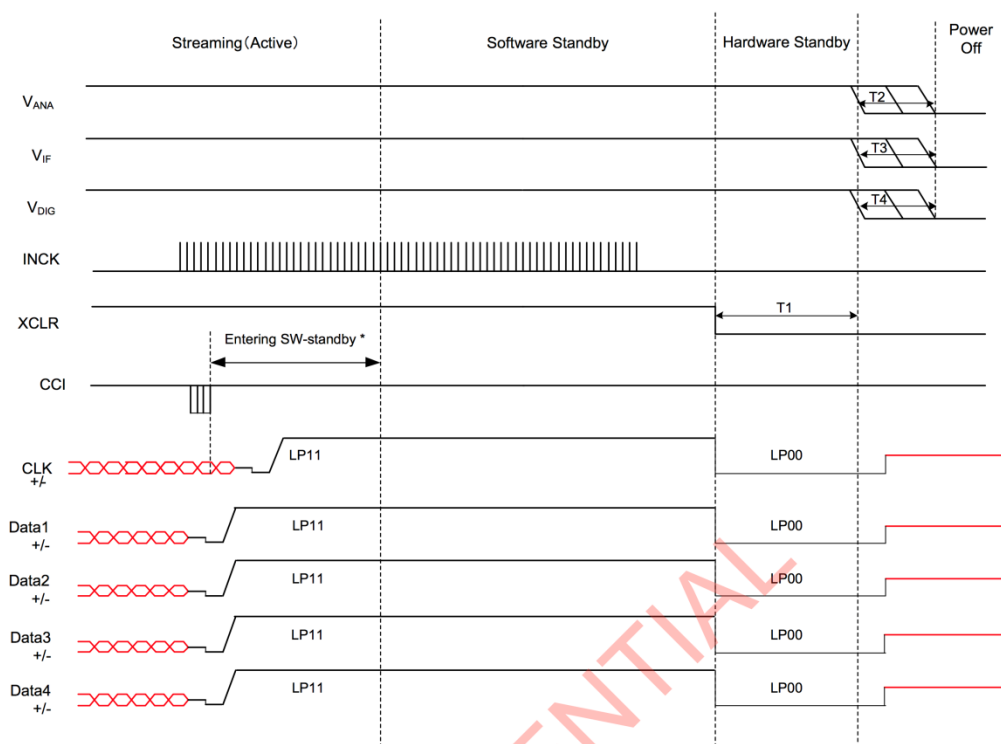

*Note: See Software Reference Manual for details of Entering SW-standby

Item	Label	Min.	Max.	Unit	Comment
XCLR Neg-edge - V _{ANA} (V _{IF} or V _{DIG}) fall	T1	0		μs	Presence of INCK during Power Off is acceptable.
Sequence free of V _{ANA} falling and V _{IF} falling and V _{DIG} falling	T2,T3,T4	V _{ANA} and V _{IF} and V _{DIG} may fall in any order.		μs	



Leopard Imaging Inc.

48820 Kato Rd, Suite 100B, Fremont, CA 94538, USA
 Phone: +1-408-263-0988
 Fax: +1-408-217-1960
 Email: sales@leopardimaging.com
 Website: www.leopardimaging.com

Revision History

Revision	Description	Release Date
1.0	First Release	23. Mar. 2019



Leopard Imaging Inc.

48820 Kato Road, Suite 100B, Fremont, CA 94538, USA
Phone: +1-408-263-0988
Fax: +1-408-217-1960
Email: sales@leopardimaging.com
Website: www.leopardimaging.com